


**Race Ramps Trailer Ramps extend your current door/ramp to decrease the angle of approach and enable your low-to-the-ground car to load without contact.**



### General Guidelines

- It is the user's responsibility to read and follow all instructions.
- Keep these instructions with the product at all times and review before each use.
- It is the responsibility of this product's owner to furnish the instructions to any person that borrows or purchases the product.
- Inspect the product before use to ensure it is assembled properly and all parts are in safe working order and free of defects.
- Never modify this product in any way.
- The ramp must make FULL CONTACT with the ground. Do not use the ramp as a bridge under any circumstances.
- Trailer Ramps are meant to only be used with vehicle tires. Do not use Trailer Ramps for loading toolboxes or any other item that has small caster wheels.
- All circumstances cannot be addressed in these instructions. Please use common sense and practice general safety measurements when using this product.
- Parts and/or instructions are subject to change without notice.

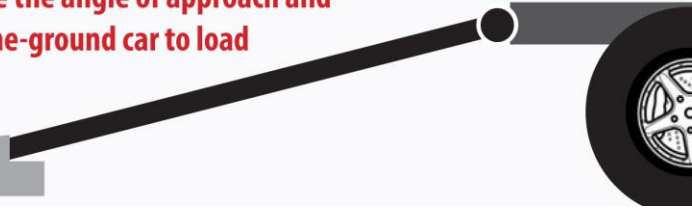


### Safety

- Before using the ramps ensure other persons are clear of the vehicle and the ramps.
- Ensure that the ramps are free from damage before use.
- Do not exceed the rated weight capacity of 3,000 lbs. maximum axle capacity.
- Do not use with tires that exceed 12-inches in width.
- Only use on dry, level, hard surfaces. Do not use if tires are wet.
- Drive slowly and cautiously onto and off of the ramps. Never accelerate or brake suddenly.
- Another person, standing clear of the vehicle, should observe and guide the driver when using the ramps.



## Operations

1. Inspect the ramps to make sure they are not damaged. Make sure your trailer and vehicle are compatible with the ramps.
2. Gently lower the trailer door and place on the Trailer Ramp notch.
3. Be careful to properly position the trailer door in the Trailer Ramp notch. Do not use affixed ramp systems with sharp edges that may cause damage to the Trailer Ramps.
4. Unfold the trailer door's flap and rest it on the Trailer Ramp's flap cut-out.
5. Interlock the second Trailer Ramp piece to complete the Trailer Ramp set-up.
6. Check that the position of the Trailer Ramps is in line with the vehicle wheels and that the steering wheel is pointed straight.
7. Carefully ascend the ramps in a slow and controlled manner until the vehicle is safely on/in the trailer. Another person, standing clear and to the side of the vehicle, should guide the driver. Never accelerate or brake suddenly.

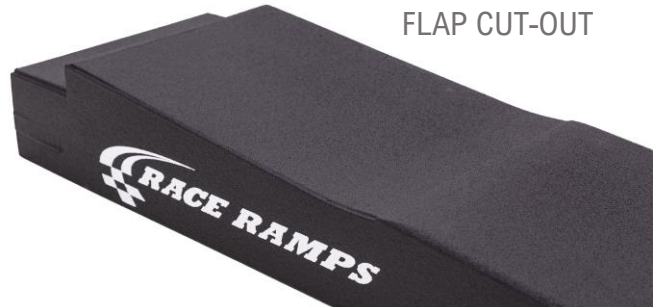

- NOTE:** Be careful to observe closely as the vehicle transitions from the trailer door incline and onto the trailer deck. Depending on your vehicle's wheelbase, it may be at risk of hi-centering or rubbing.
8. Once the vehicle is safely loaded on/in the trailer, the Trailer Ramps may be removed.
  9. When unloading the vehicle, lower the trailer door and place it on the Trailer Ramp notch. Check that the position of the Trailer Ramps is in line with the vehicle wheels and that the steering wheel is pointed straight. Carefully descend the ramps in a slow and controlled manner until the vehicle is safely on the ground.

**Race Ramps Trailer Mates (sold separately)**

**(Part #RR-TM-FRT)** Front Trailer Mates feature a concave design that cradles a vehicle's tires. When transporting a vehicle in/on a trailer, finding the location that provides equal weight distribution is important. When you feel your vehicle's tires settle into the Front Trailer Mate cradle, you will know that you have reached your designated parking position.

**(Part #RR-TM-REAR)** Rear Trailer Mates are an easy drive up ramp that provides a 3-inch lift. When used in conjunction with the Front Trailer Mates (also 3-inches high), the additional ground clearance provides easier access to a vehicle's tie-down points and assists in vehicle doors clearing wheel wells.

**Product Warranty and Liability**

Race Ramps purchased from an authorized dealer or directly from Race Ramps LLC are backed by a one-year warranty. Our warranty is strictly limited to the repair or replacement of manufacturer defects and does not cover damage to a car, personal injury, labor, or any other damage or injury. Race Ramps LLC is not responsible for the damage caused by improper or unintended use. In no event shall Race Ramps LLC be responsible for consequential damage or costs. The warranty shall terminate one year from the date of purchase by the original owner and is not transferable. Because we are continuously conducting research and development, specifications are subject to change without notice. Those items sold by Race Ramps LLC, but manufactured by other companies are subject to the manufacturer's warranty and policy.

**Questions?** Please contact Race Ramps at 800-213-5883 or email [support@racerampramps.com](mailto:support@racerampramps.com).